



4F-1, 236, Fu-Te 2nd Rd., His Chih,
Taipei Hsien, 221, Taiwan
TEL: 886-2-6616-6692 • 2694-6687
FAX: 886-2-2694-6875 • 2694-5097

Pinch Roller Changing Process

Expert/Expert II

Expert LX /Expert II LX

Revision History :


Version	Date	Page	CONTENTS
1.0	May 24, 2014		First release
2.0	Sept. 16, 2015		Add RX II

How to replace Pinch Roller


Tools Required:

- Phillips screwdriver

1. Pull up the Pinch Roller lever.

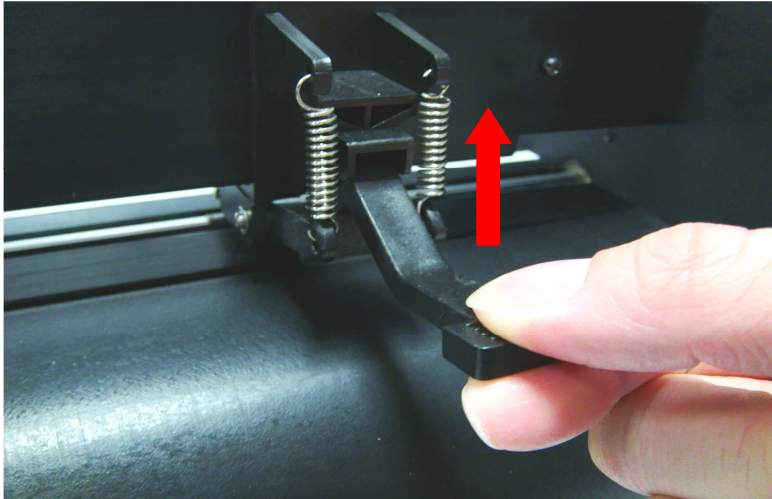

2. Behind of the machine, on right side use Phillips screwdriver to loose the screw shown as below picture.

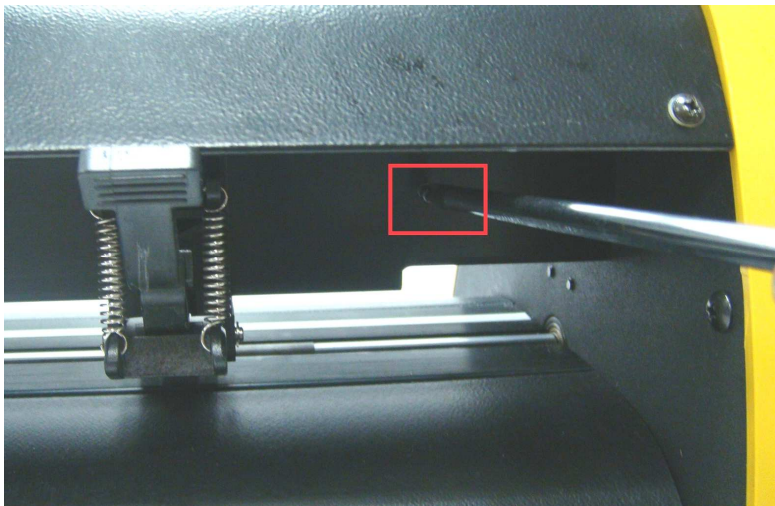

3. Push to right side, press down then take out the Pinch roller.

