


How to replace Pinch Roller

Tools Required:

- Phillips screwdriver

1. Pull up the Pinch Roller lever.

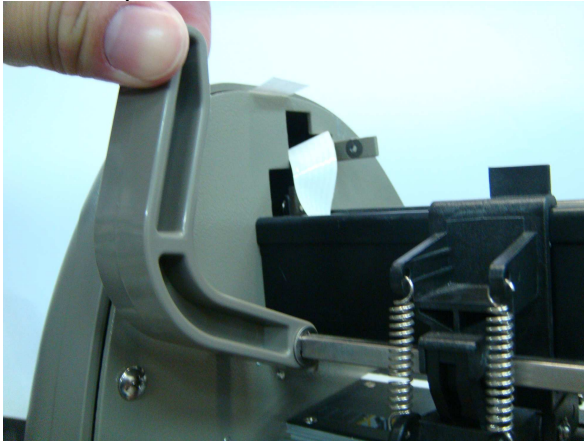

2. Behind of the machine, on right side use Phillips screwdriver to loose the screw shown as below picture.



3. Push to right side, press down then take out the Pinch roller.

