



Instruction of Adding GCC Driver to Onyx 10.2


Step 1. Go to Application Settings under Layout.

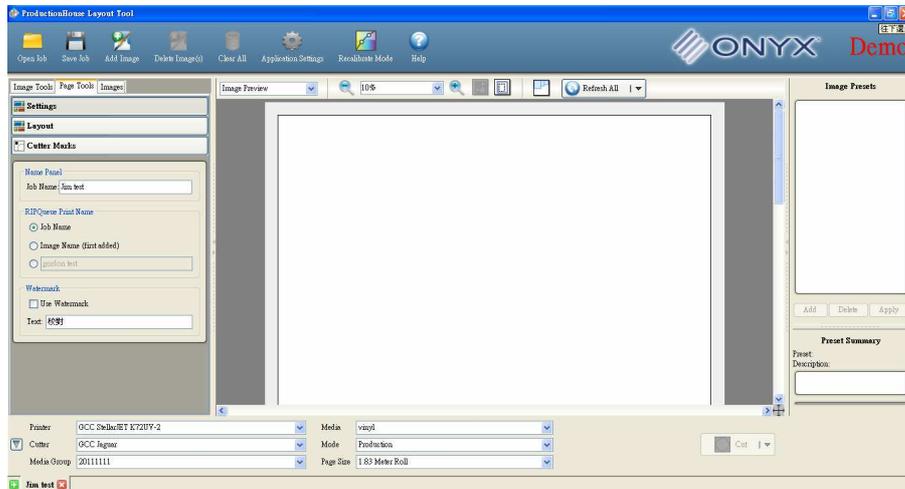


Step 2. Select GCC Driver (GCC Jaguar Driver is used as an illustration here) and click "Add Cutter".

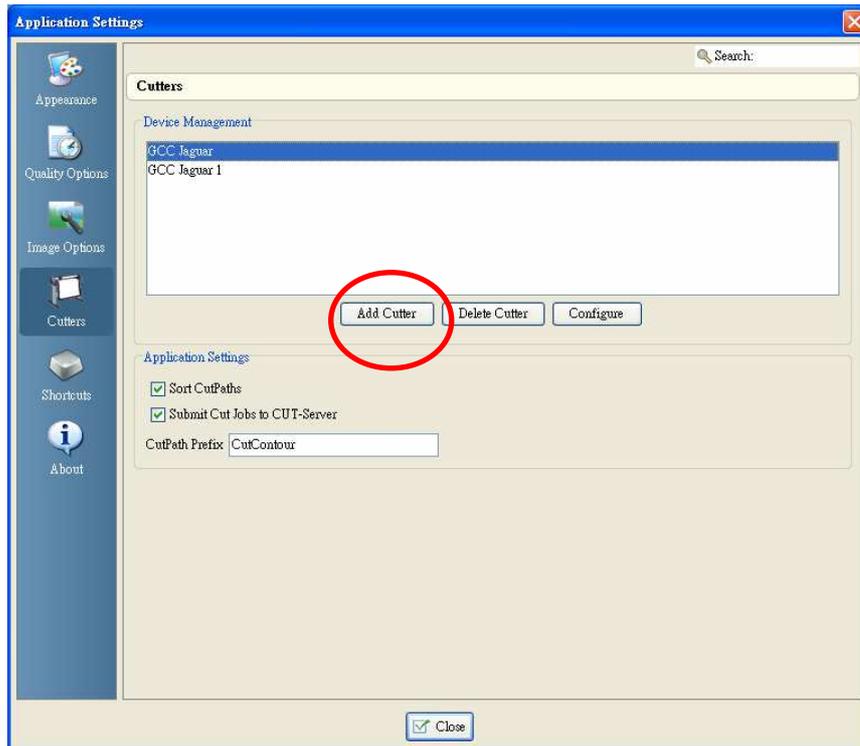


Step 3. Complete the setting for GCC Driver.

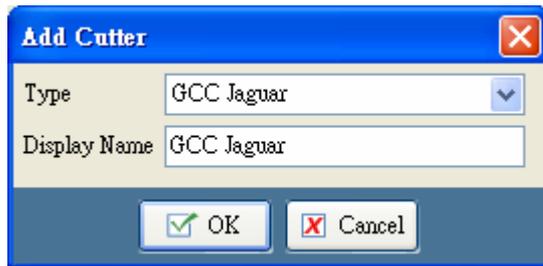


Step 4. Complete output setting.

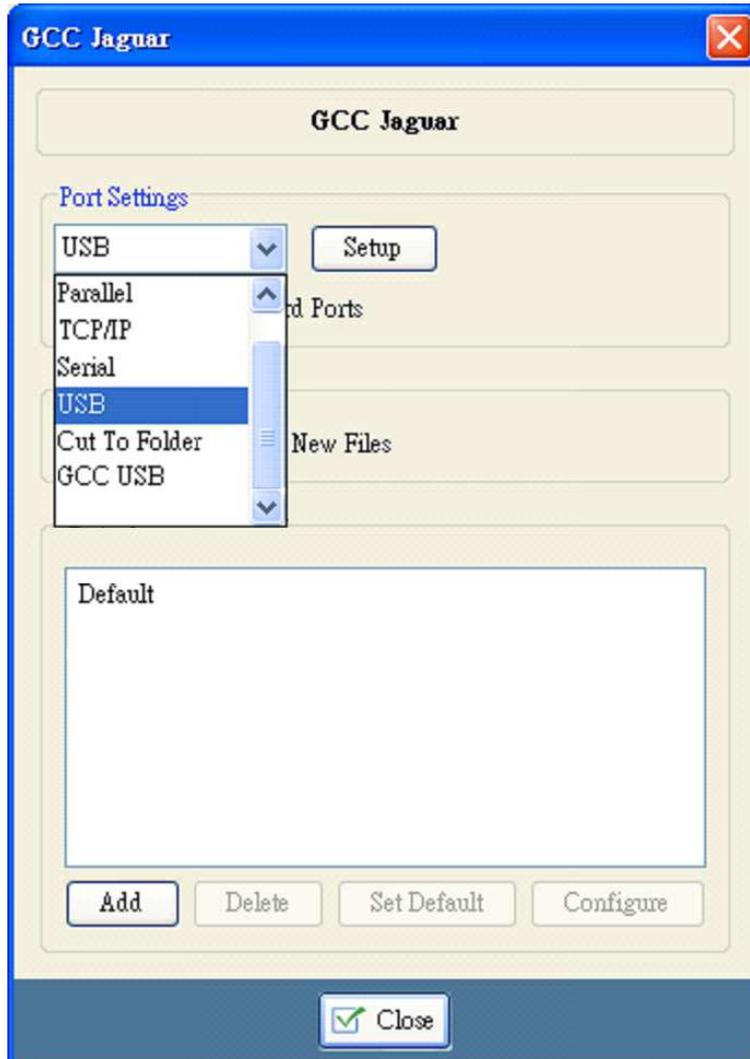

Step 5. Select "Add Image" to input your image to the working area (the cutting line of this file must be set as "CutContour") and select "GCC Jaguar" in "Cutter" at the lower left corner.

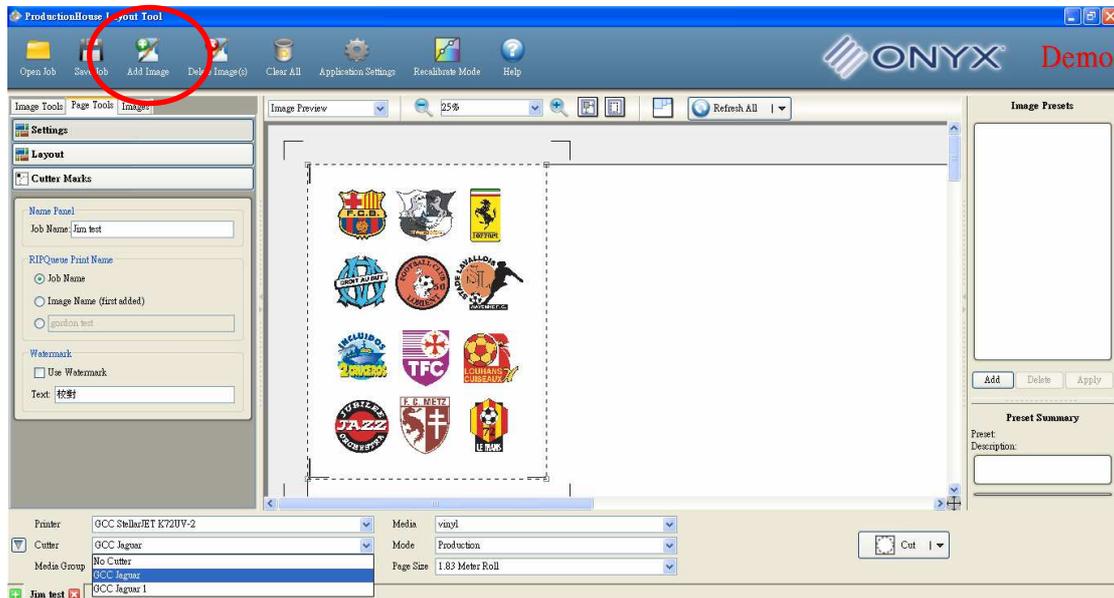

Step 6. Click "Cut" at the lower right corner and output the image.

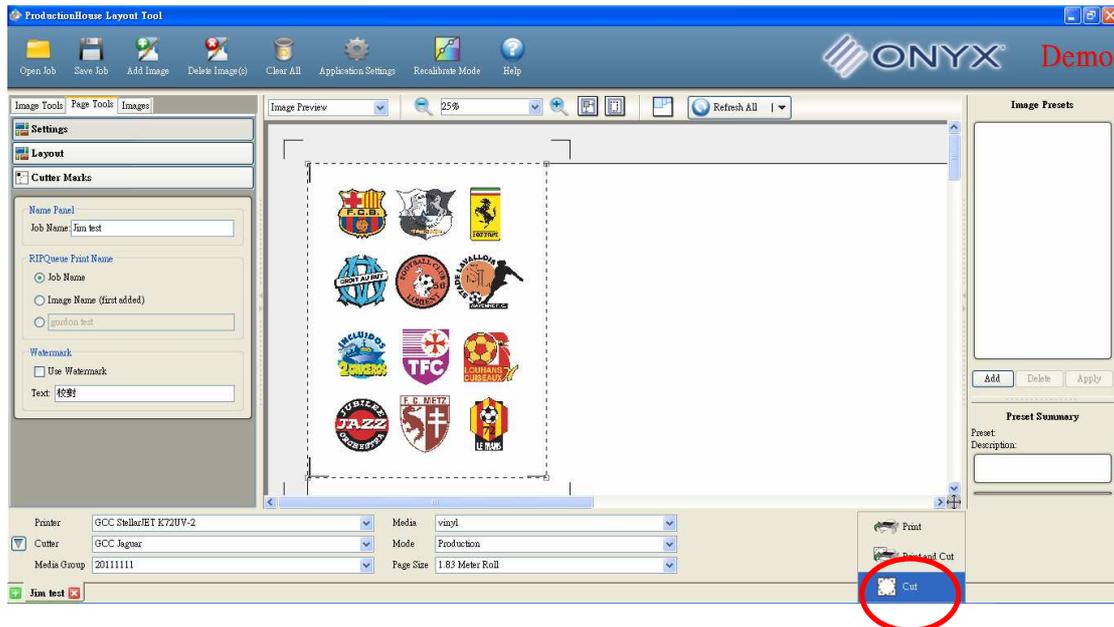

Step 7. Open "CUT-Server" and click "Cut Now" to complete the cutting process.

