



Innovation  
*With a Human Touch*

4F-1, 236, Fu-Te 2<sup>nd</sup> Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097


# C180 II Power Supply Changing Process

Version: 1.0  
May 20, 2014


Revision History :

Version	Date	Page	CONTENTS
1.0	May, 20 2014		First release

1. Dismount four screws on the top back panel (see red arrows below)

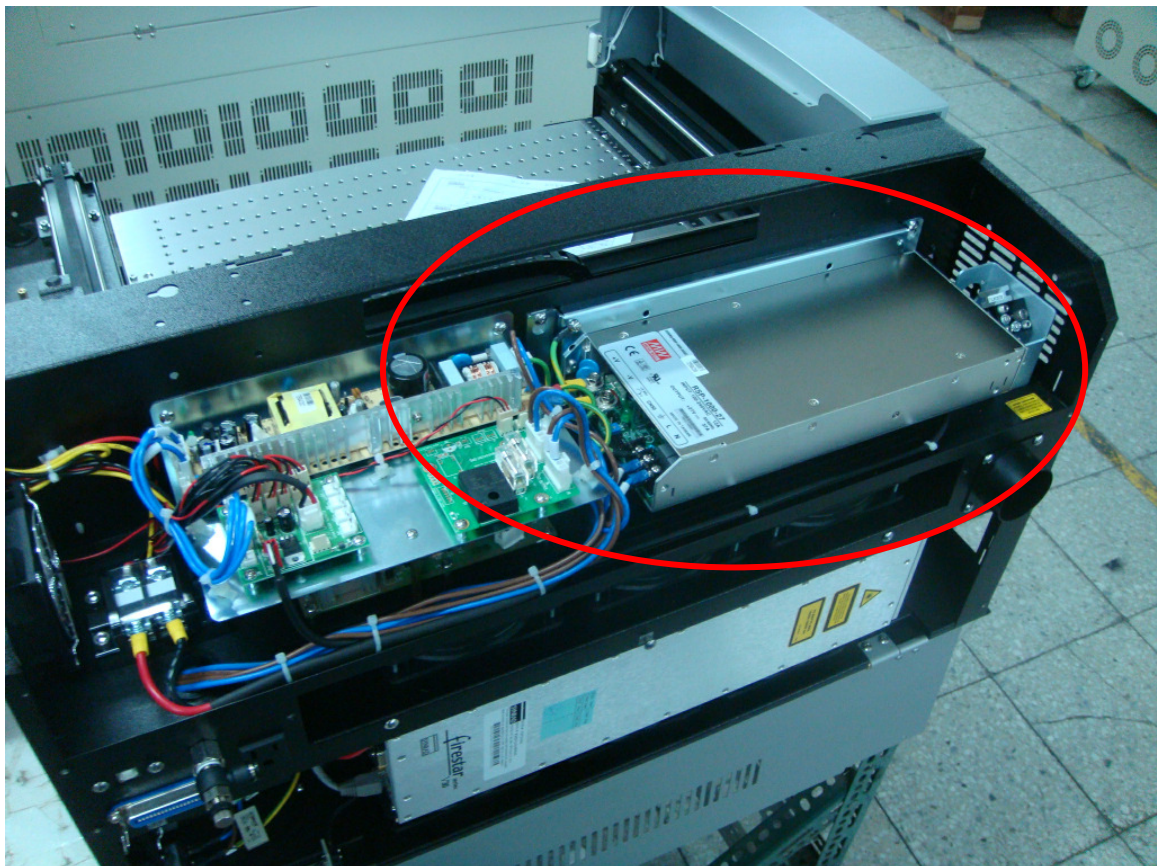

2. Loosen the screws and remove the two power supply AC side cable (red arrow)

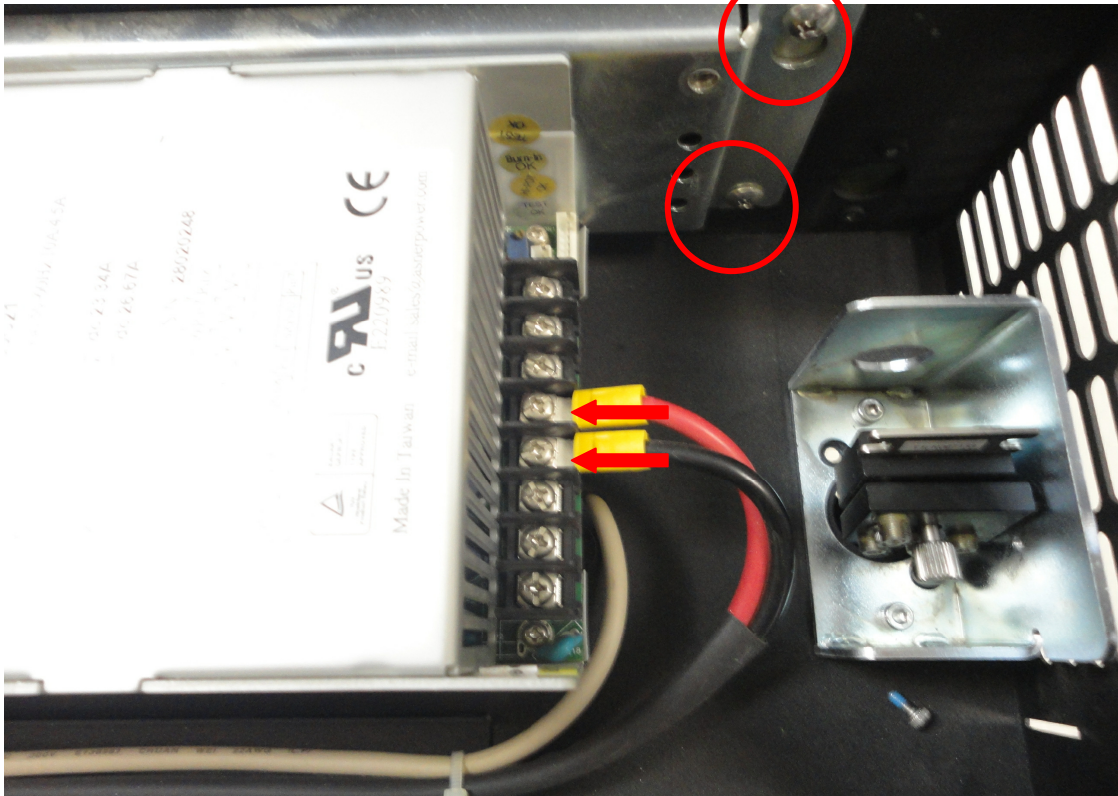

3. Remove the DC side 3 cables (see red screws)

